

How to replace the batteries

Battery replacement instructions for the Bitlock Mini and Bitreader+

① Checking the battery information:

1. Low battery notification alert:





▪ Main device

When the battery is low, the main device will make a beeping sound and blink in different colors when used.



▪ HomeHub app.

A notification will be sent by the app. when the battery runs low.

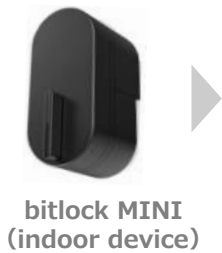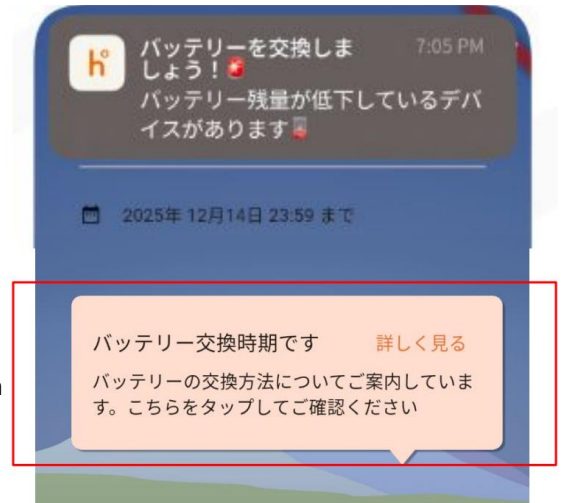


▪ Main device ※1


When the battery is low, the device will make 5 short beeping sounds when used.
When the battery is almost depleted, it will make 5 long beep sounds.

※1 The indoor lock device Bitlock MINI low battery alert feature was added in 2024/9/11. For those who have an old version, please update the firmware through the update option on the setting tab of the bitlock Mini, otherwise it will not sound the notification.

▪ How to update the firmware.

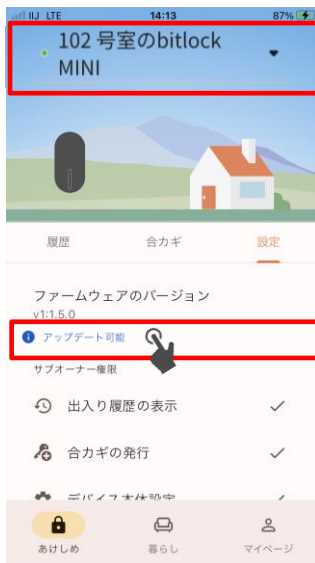

After connecting the app. with the smartlock, select the Bitlock MINI device in the list on the top of the main screen, select the setting tab (設定) and scroll down to where it shows the firmware version. If a new version update is available, select the notification (アップデート可能) and proceed with the update.。

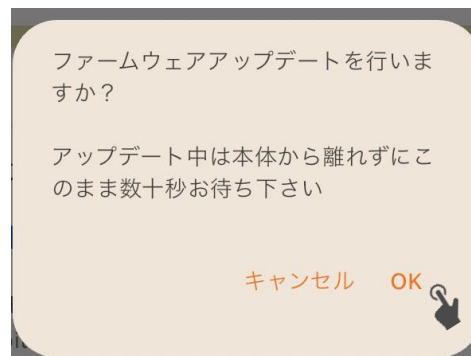



Regarding the Homehub notifications

① In-app. notification ② Phone notications

※The battery information updates when the app used on the lock.

【Phone notice】Examples

【In-app. notice】Examples



Reminders

The app. will also send reminders when the battery information is not update within a certain period.




2. How to check the battery level (from the HomeHub app.)

※The current battery level will be updated once the phone connects withthe smartlock.

① Open the homehub app. and open the device list.

② From the list choose the 「bitreader+」 or the「bitlock MINI」.

③ On the setting tab, you can check the currenty battery level of the chosen device.

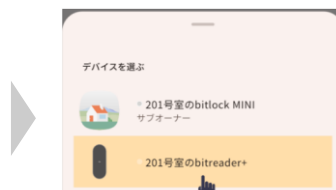

電池残量表示	電池の残量
	ほほいっぱいの容量があります
	容量が少なくなりました
	容量がほとんどありません。。



② Battery replacement instructions for the bitreader+

① Open the cover on the top of the device from the left side.



② Pull the knob to remove the battery case.



※ Use the CR123A (lithium) battery type

③ Return the battery case after replacing the batteries.

④ Close the rubber cover.



⑤ Check if the device is working correctly by testing the numberpad afterwards.




③ Battery replacement instructions for the bitlock mini

① Remove the front cover.




② Slide the lock to remove the battery case.

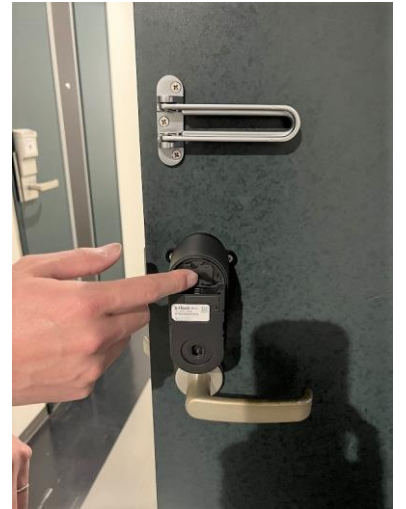

③ After sliding the lock, pull the knob to remove the case.



※ Use the CR123A (lithium) battery type

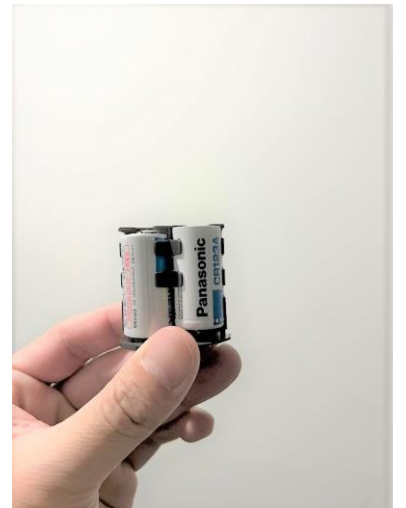

④ After changing the batteries, return the case to the device.



⑤ Slide back the lock to secure the case in place.



⑥ Close the front cover again aligning the lock.

